
HOLLAND
BAR STOOL

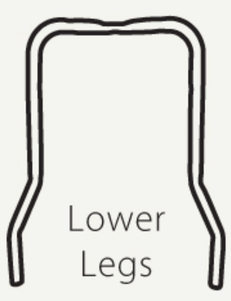

Double Ring Assembly

In The Box (Parts)


Upper Legs x1


Lower Legs x1


Large Ring x1


Small Ring x1



Seat Cushion x1


Swivel x1

Hardware Pack



x4



x8

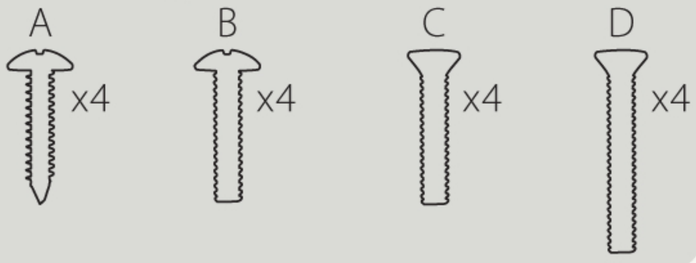
A x4
B x4
C x4
D x4

Tools Needed



Crescent Wrench

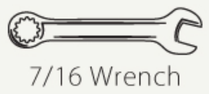
7/16 Wrench

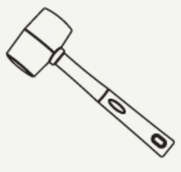

Rubber Mallet


Drill/Phillips


① Cross the upper and lower leg sections together. Ensure the flat sections are touching and all four feet rest evenly on the floor. If needed, gently pull the legs apart or together until properly aligned.

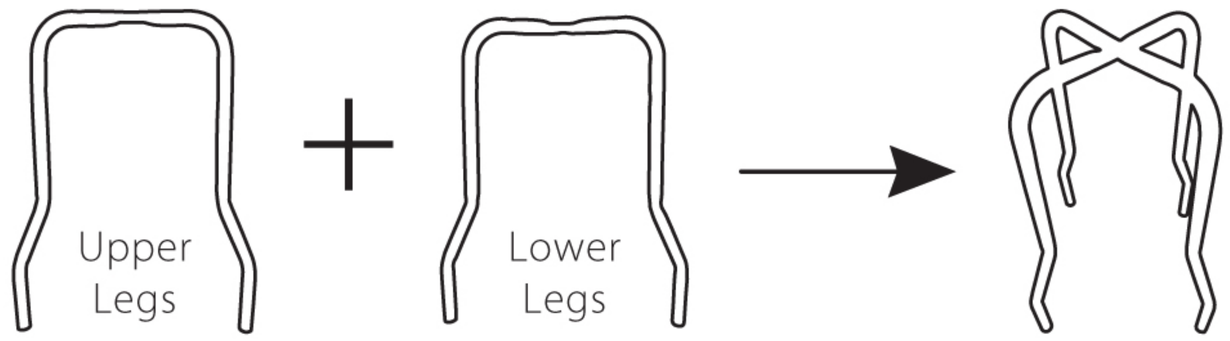


② Once the legs are aligned, place the large lower ring over the top of the frame and align the mounting holes.
Insert flat head bolts (D) from the outside through the leg and ring. Install a nut on the inside and leave finger-tight.

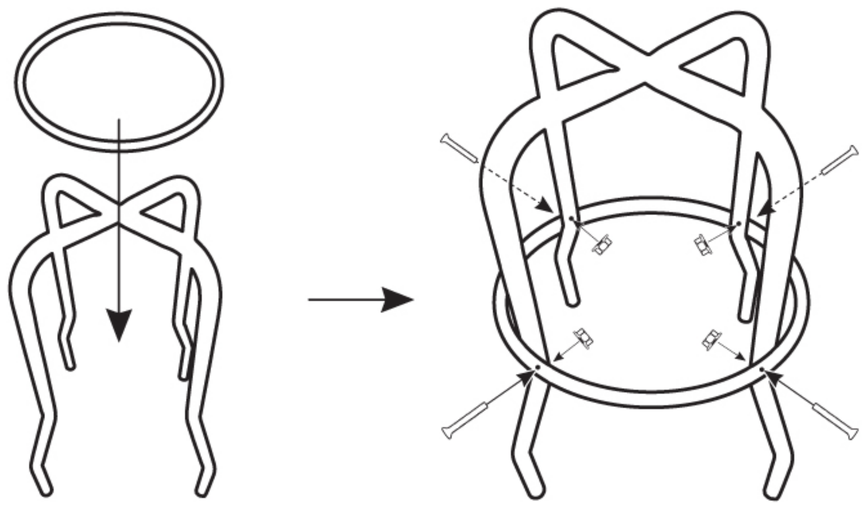

③ Position the small upper ring from underneath and align the mounting holes.
Insert flat head bolts (C) from the inside through the ring and leg.

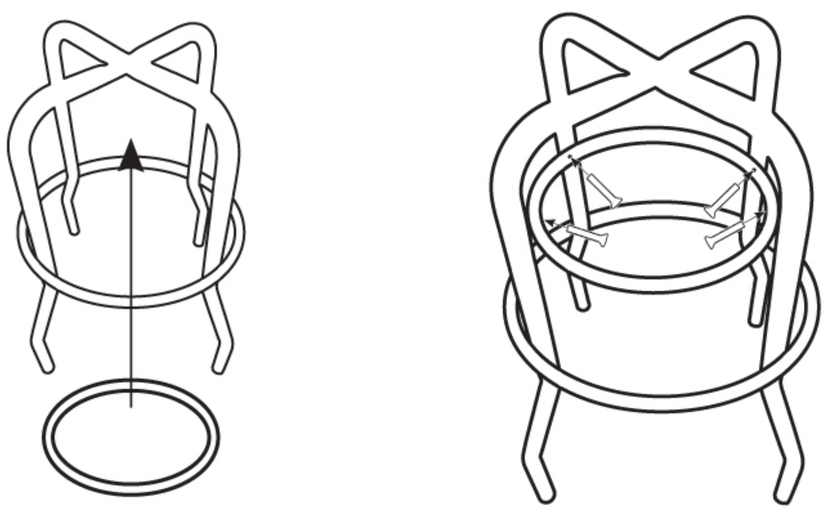

④ Using firm, steady pressure, rotate the swivel approximately 45 degrees.

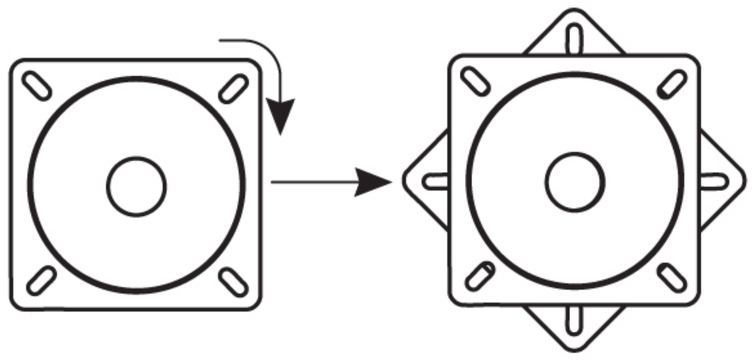

Note: Memory swivels require more force to rotate and will return to their original position when released.

See next page for additional steps.


Assembly instructions apply to the following models: C7C1, C7C4, C7C3C, L7C1, L7C4, L7C3C.
If you need assistance or have questions, contact us at help@hollandbarstool.com.

HOLLAND
BAR STOOL




Double Ring Assembly

In The Box (Parts)

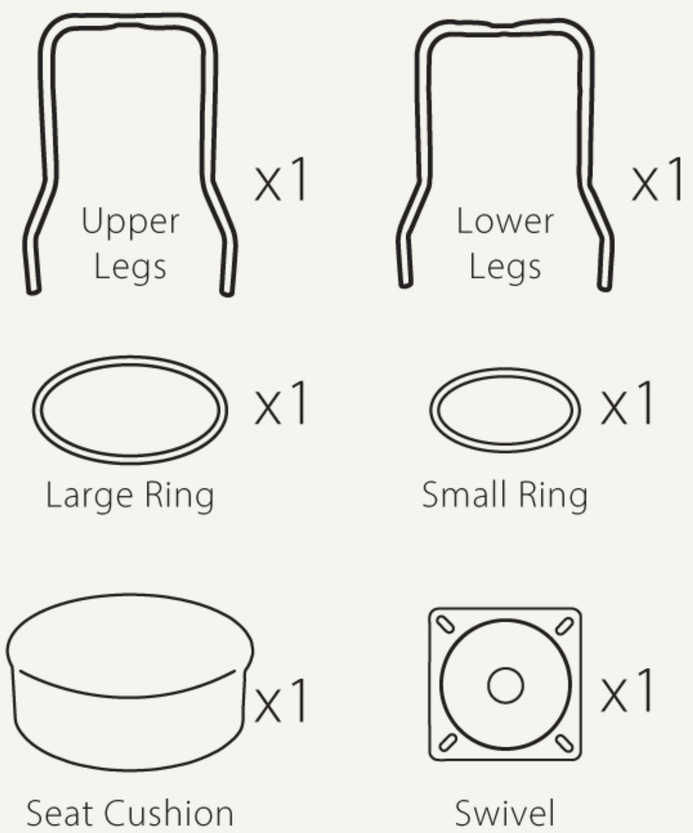

Hardware Pack

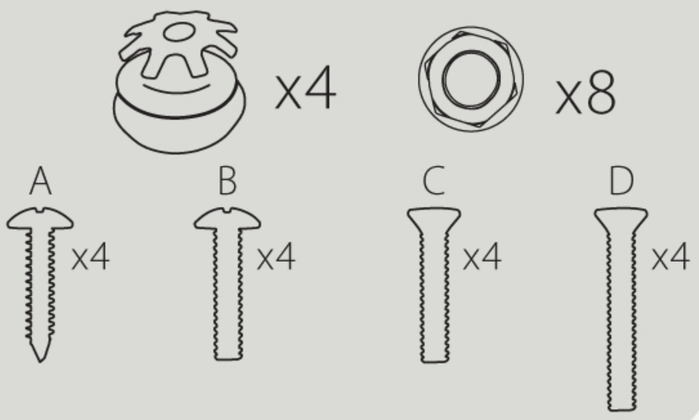


Tools Needed




⑤ Align the swivel plate holes with the holes at the top of the leg assembly. Insert bolts (B) through the swivel plate and leg assembly. Install the nuts and tighten securely.

Before proceeding, verify that all four feet rest evenly on the floor. If necessary, gently adjust the leg assembly before fully tightening the hardware. Tighten all swivel hardware first, followed by the small upper ring, and then the large lower ring.

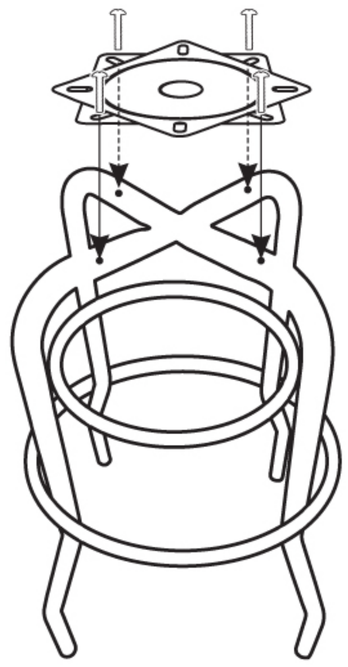

⑥ Turn the stool base upside down and use a rubber mallet to install the floor glides.

Note: Place a protective pad or piece of cardboard between the swivel plate and floor to prevent damage during installation.

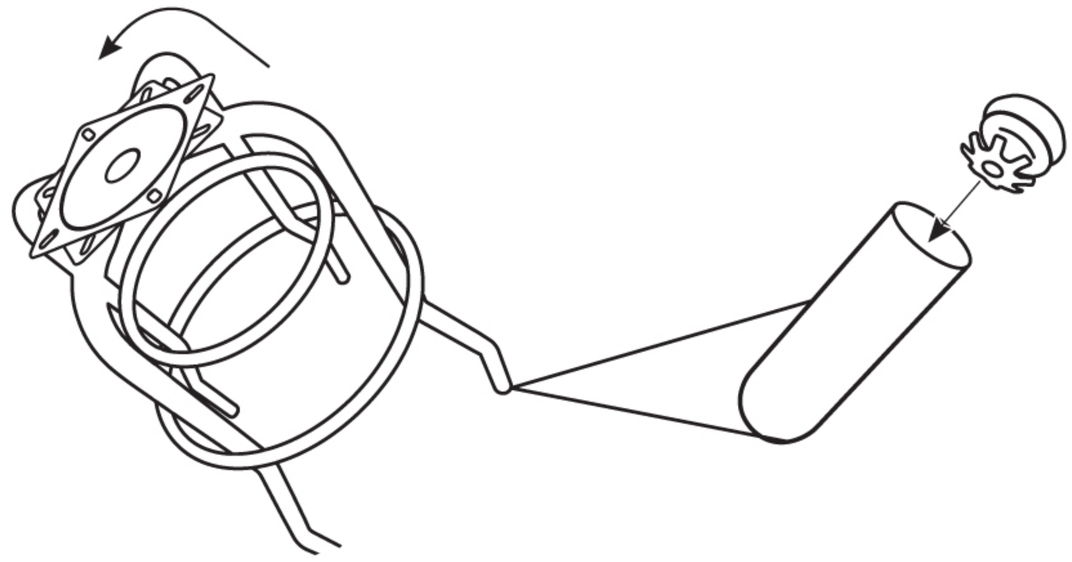

⑦ Turn the seat cushion upside down on a soft surface and align the swivel plate with the holes indicated on the cardboard template. Install screws (A) through the swivel plate and directly into the seat bottom. Predrilling is not required.

Assembly instructions apply to the following models: C7C1, C7C4, C7C3C, L7C1, L7C4, L7C3C.
If you need assistance or have questions, contact us at help@hollandbarstool.com.